

MODEL DJ-5C DISPATCHER 100

SERVICE PARTS CATALOG

THIS PUBLICATION REPLACES ALL PREVIOUS
EDITIONS OF DJ-5C SERVICE PARTS CATALOGS

AM General Corporation 

SOUTH BEND, INDIANA 46623

NSN 7610-00-V99-0002 AM General Number ~~10503~~ Issued September 1975

10503

CONTENTS

INTRODUCTION

LIST OF ILLUSTRATIONS

ENGINE 1

FUEL 2

EXHAUST 3

COOLING 4

ELECTRICAL 5

TRANSMISSION 6

PROPELLER SHAFT 7

FRONT AXLE 8

REAR AXLE 9

STEERING 10

BRAKES AND WHEELS 11

FRAME AND BUMPERS 12

SUSPENSION 13

BODY 14

HEATER 15

SPECIAL TOOLS 16

ALPHABETICAL INDEX

NUMERICAL INDEX

Printed in U.S.A.

GENERAL

This catalog is an illustrated list of repair parts for AM General model DJ-5C Dispatcher 100 vehicles.

CATALOG ARRANGEMENT

This catalog is divided into major sections in the sequence shown on the title page. Major sections are divided into smaller groups of parts, each with its own illustration. Immediately following this introduction is a complete listing of all illustrations in this catalog. The first page of each section also contains a listing for that section.

Illustrated items are numerically keyed to the text which is located on the facing page. Figure numbers are located at the bottom of each illustration and also in bold type at the beginning of a description column. Item numbers are keyed to illustrated items.

Alphabetical and Numerical Indexes are located at the end of the catalog.

PARTS SERVICED BY AM GENERAL

The AM General Corporation will service virtually all of the repair parts for this vehicle except those which are more economical and/or more practical to procure locally. The principal items not serviced are standard hardware, tires, batteries, fuses, lamp bulbs, sealants, lubricants, adhesives, paint, and standard sizes and types of tubing, hoses, and electrical connectors and fittings. Items which are listed in this catalog but are not serviced are indicated by the legend "N/S" in the part number column.

SPECIAL TOOLS

Special tools and equipment listed in this catalog are not offered for sale by AM General. Information regarding their availability can be obtained from your AM General Service Representative or from the factory.

HOW TO LOCATE PARTS

When function, use, or location is known: Refer to the List of Illustrations.

When nomenclature is known: Refer to the Alphabetical Index.

When part number is known: Refer to the Numerical Index.

USAGE CODES

DJ-5C vehicles are equipped with three different engines. When a part is peculiar to one or the other, a usage code is shown in the Service Parts List, immediately following the description of the part. If no code is shown, the part is applicable to all engines. The explanation of the codes used in the Service Parts List is as follows:

Code (A) - This code is applicable to the vehicles equipped with engines having the following serial numbers:

Right-Hand Drive Vehicles

310001 thru 315075
510001 thru 510057
510060 thru 510061
510137 thru 510140

Left-Hand Drive Vehicles

300001 thru 303102
400001 thru 400015
500001 thru 500048

Code (B) - This code is applicable to the vehicles equipped with engines having the following serial numbers:

Right-Hand Drive Vehicles

315076 thru 318089
410001 thru 418886
510058 thru 510059
510062 thru 510136
510141 thru 510832

Left-Hand Drive Vehicles

303103 thru 303336
400016 thru 400945
500049 thru 500245

Code (C) - This code is applicable to the vehicles equipped with engines having the following serial numbers:

Right-Hand Drive Vehicles

510833 up

Left-Hand Drive Vehicles

400946 thru 401582
500246 thru 509999

HOW TO ORDER SERVICE PARTS

List the part number, quantity, and description of the parts.

Define shipping instructions on other than scheduled stock orders. Unless designated, shipment will be made by motor freight or parcel post at the discretion of the shipper.

Address parts orders to:

Parts Department
AM General Corporation
701 W. Chippewa Avenue
South Bend, Indiana 46623

Personnel are on duty to accept telephone orders from 7:00 A.M. to 5:00 P.M., Eastern Standard Time, five days per week. The telephone numbers are (219)-287-5011, extensions 447 or 448, or (219)-287-7844.

DAMAGED SHIPMENTS, SHORTAGES OR ERRORS

All shipments are properly packed and are in good order when delivered to the transportation company. Responsibility ends with such delivery. When a damaged shipment is received, a claim should be filed immediately against the carrier making delivery.

All claims for shortages or errors in packing must be made—to the same address from which the parts were ordered—within ten (10) days from receipt of shipment, and must be accompanied by the original packing slip, with proper notation of shortage or error signed by responsible person in receiving department.

ABBREVIATIONS

Abbreviations used in this catalog are as follows:

Adj	Adjusting	Incl.	Includes
AR	As Required	L.H.	Left-Hand
Assy	Assembly	L.H.D.	Left-Hand Drive
Brkt	Bracket	N/A	Not Applicable
C.E.	Commutator End	N/I	Not Illustrated
CTL	Cut to length from	N/S	Not Serviced
D.E.	Drive End	O.D.	Outside Diameter
Dia	Diameter	O.S.	Oversize
Frt.	Front	R.H.	Right-Hand
Ft.	Foot or Feet	R.H.D.	Right-Hand Drive
Gal	Gallon	Supt.	Support
H.D.	Heavy Duty	U.S.	Undersize
Hsg	Housing	V	Volt
I.D.	Inside Diameter	W/	With
In	Inch or Inches	W/O	Without

SUGGESTIONS AND RECOMMENDATIONS

Recommendations for improving or correcting this catalog are encouraged. Please forward corrections or recommendations directly to the AM General Corporation, Attention: Publications Department.



LIST OF ILLUSTRATIONS

Title	Figure Number	Title	Figure Number
Section 1			
Cylinder Block	1-1	Main Light Switch	5-10
Cylinder Head, Valves, Springs, Tappets, Rocker Arms and Push Rods	1-2	Headlamp Dimmer Switch	5-11
Crankshaft, Vibration Damper, and Main Bearings	1-3	Ignition/Starter Switch	5-12
Connecting Rods and Bearings, Pistons, Pins, and Rings	1-4	Stoplight Switch	5-13
Valve Rocker Arm Cover (A & B)	1-5	Dome Light	5-14
Valve Rocker Arm Cover (C)	1-6	Front Marker/Reflector	5-15
Camshaft and Timing Chain	1-7	Rear/Side Marker Lamp	5-16
Oil Pump	1-8	Back-Up Lamp Assy	5-17
Oil Pan	1-9	Tail, Stop and License Plate Lamps & Reflector	5-18
Oil Filter	1-10	Directional Signal Switch	5-19
Engine Mounting	1-11	Flasher Switch	5-20
Manifolds	1-12	Circuit Breaker & Fuse Panel	5-21
Section 2			
Fuel Tank and Lines (A & B)	2-1	Horns	5-22
Fuel Tank and Lines (C)	2-2	Battery Support & Cables	5-23
Carburetor	2-3	Instruments	5-24
Fuel Pump and Filter	2-4	Body Wiring Harness	5-25
Air Cleaner, Heat Shrouds and Duct	2-5	Chassis Wiring Harness	5-26
Choke Heater Tube	2-6	Section 6	
Accelerator Control	2-7	Case, Rear Adapter & Oil Pan (M-11)	6-1
Section 3			
Exhaust System	3-1	Torque Converter (M-11)	6-2
Section 4			
Cooling System Components	4-1	Vacuum Modulator (M-11)	6-3
Section 5			
Alternator (A & B)	5-1	Valve Body, Downshift Solenoid and Terminal (M-11)	6-4
Alternator (C)	5-2	Park/Lock Components (M-11)	6-5
Starting Motor	5-3	Oil Pump (M-11)	6-6
Distributor (A & B)	5-4	Front Servo (M-11)	6-7
Distributor (C)	5-5	Rear Servo (M-11)	6-8
Coil and Electronic Ignition Unit	5-6	Front & Rear Bands (M-11)	6-9
Headlamp	5-7	Front Clutch (M-11)	6-10
Front Signal Lamp	5-8	Rear Extension Housing and Bearing Retainer (M-11)	6-11
Rear Signal Lamp	5-9	Forward Sun Gear, Output Shaft Governor, and Speedo Drive Gear (M-11)	6-12
		Rear Clutch (M-11)	6-13
		Shift Controls - At Transmission (M-11)	6-14
		Shift Controls-Floor Mounted	6-15
		Transmission Mounting	6-16



LIST OF ILLUSTRATIONS

Title	Figure Number	Title	Figure Number
Section 11			
Oil Cooler Tubes (M-11)	6-17	Hand (Parking) Brake	11-1
Seals & Gaskets, (M-11)	6-18	Wheel Brakes	11-2
Case, Rear Adapter & Oil Pan (M-43)	6-19	Wheel Cylinders	11-3
Torque Converter & Housing (M-43)	6-20	Master Cylinder	11-4
Vacuum Modulator (M-43)	6-21	Brake Warning Valve & Switch	11-5
Valve Body & Down-Shift Solenoid (M-43)	6-22	Brake Hose & Tubes	11-6
Park/Lock Components (M-43)	6-23	Brake Pedal	11-7
Oil Pump (M-43)	6-24	Wheels	11-8
Front Servo (M-43)	6-25		
Rear Servo (M-43)	6-26	Section 12	
Front & Rear Bands (M-43)	6-27	Frame Assembly	12-1
Front Clutch (M-43)	6-28		
Rear Bearing Retainer (Extension Housing) (M-43)	6-29	Section 13	
Speedometer, Governor, Forward Sun Gear and Output Shaft (M-43)	6-30	Front Spring and Shock Absorbers	13-1
Rear Clutch (M-43)	6-31	Rear Spring and Shock Absorbers	13-2
Shift Controls - At Transmission (M-43)	6-32		
Oil Cooler Tubes (M-43)	6-33	Section 14	
Section 7			
Propeller Shaft and Universal Joints (M-11)	7-1	Front Fenders & Grille	14-1
Propeller Shaft and Universal Joints (M-43)	7-2	Hood	14-2
Section 8			
Front Axle	8-1	Body Front End and Underbody (Left Front View)	14-3
Front Wheel Hub, Drum and Bearings	8-2	Body Front End and Underbody (Right Rear View)	14-4
Section 9			
Rear Axle	9-1	Body Sides & Roof	14-5
Differential	9-2	Side Doors	14-6
Section 10			
Tie Rod	10-1	Rear Door	14-7
Drag Link	10-2	Seats	14-8
Steering Damper	10-3	Seat Belts	14-9
Steering Gear - LHD - Saginaw	10-4	Convex Mirror - Fender Mount	14-10
Steering Gear - RHD - Ross	10-5	Driver's Side Mirror	14-11
Steering Column and Shafts	10-6	Passenger Side Mirrors	14-12
		Inside Mirror	14-13
		Sun Visor	14-14
		Windshield Washer	14-15
		Windshield Wiper	14-16
		Windshield Wiper & Washer Switch	14-17
		Section 15	
		Heater and Defroster	15-1
		Section 16	
		No Illustration	